

## IPK - STATION SPEED DIAL

1. Press the **Feature** key.
2. Press the **Redial** key.
3. Dial the System Speed Dial Memory location **80 ~ 99**.
4. Dial the trunk access code, i.e. **9** (if necessary).
5. Dial the telephone number to be stored (24 digits maximum).
6. Press the **Hold** key (if entering name) and dial the name of the party (13 characters maximum).
7. Press the **Feature** key again.

**Note:** Press the **Redial** key to insert a pause or Recall to store a hookflash.